

Dual Band 802.11ax 1800Mbps Wireless Gigabit Router

WDRT-1800AX



1. Package Contents

Thank you for choosing PLANET WDRT-1800AX. Before installing the router, please verify the contents inside the package box.


WDRT-1800AX	Quick Guide	Ethernet Cable	Power Adapter




If there is any item missing or damaged, please contact the seller immediately.

2. Physical Introduction

Front Panel of WDRT-1800AX

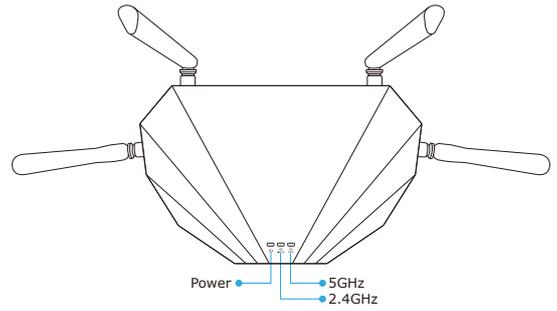


Rear Panel of WDRT-1800AX

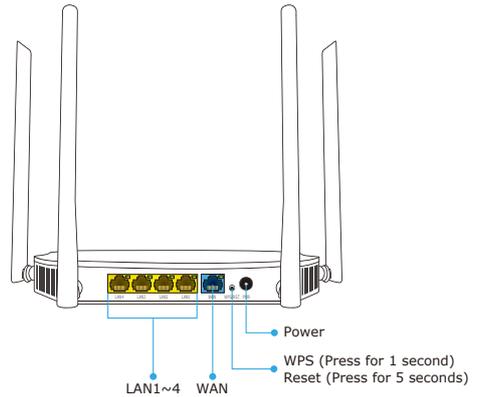


3. Hardware Installation


Step 1: Locate the WDRT-1800AX in an optimum place, and adjust the antenna for the best coverage.

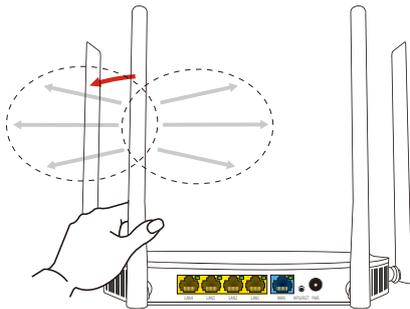

Step 2: Connect the Power Adapter provided in the package to the WDRT-1800AX. The Power LED on the front panel will turn on accordingly.

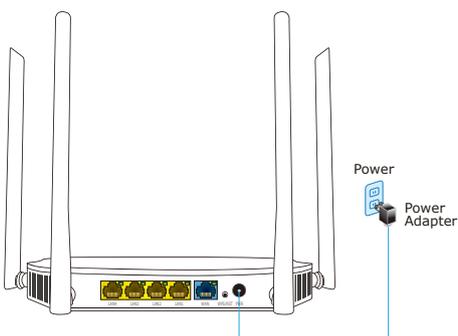


Step 3: Follow the figure below to connect the network devices. It depends on your network environment to connect the WAN port to a Cable/xDSL modem, or the Ethernet directly in your place.

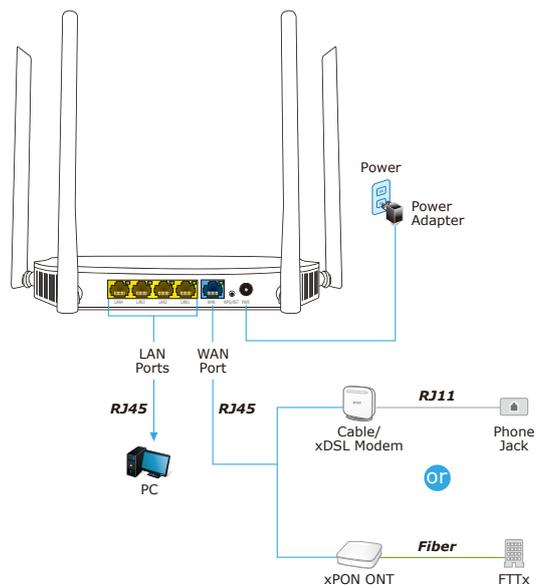

4. Network Configuration (Windows 10)

Set your computer to get an IP address from the Wireless Router:

1. Click the "Start" button located at the lower-left corner of your computer.
2. Click "Settings".
3. Double-click the "Network & Internet" icon.
4. Click "Change Adapter Options".
5. Double-click "Local Area Connection".
6. Select "Internet Protocol Version 4 (TCP/IPv4)" and click "Properties".
7. Select "Obtain an IP Address automatically" and "Obtain DNS Server Address automatically", and then click the "OK" button twice to save the configuration.

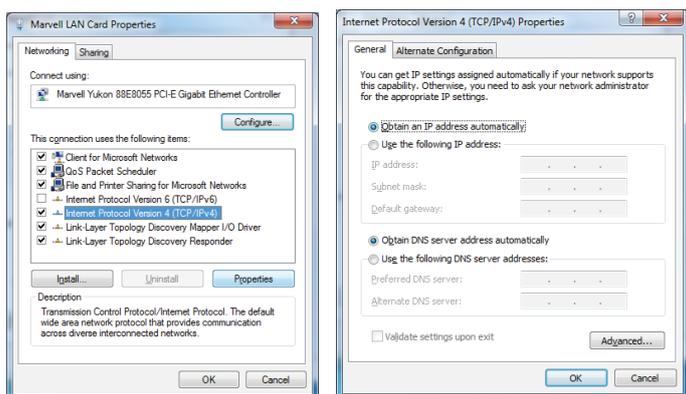

- 5 -


5. Enter into the Web Management

Default IP Address: **192.168.1.1**
Default Password: **admin**
Default SSID: **PLANET_2.4G**
PLANET_5G

- Step 1:** The Web management allows you to access and manage the Wireless Router easily. Launch the Web browser and enter the default IP address <http://192.168.1.1>.




- Step 2:** When the login window pops up, please enter the Password. The default Password is "admin". Then click the "Login" button to continue.

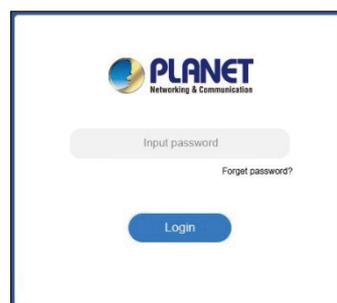


- 6 -

- Step 3:** Click the "Enter the management page" button to continue.

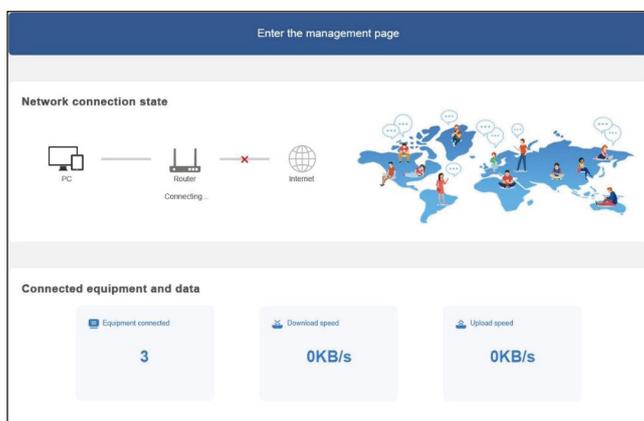

- Step 4:** You can see the Web management UI of the WDRT-1800AX after configuring this device.

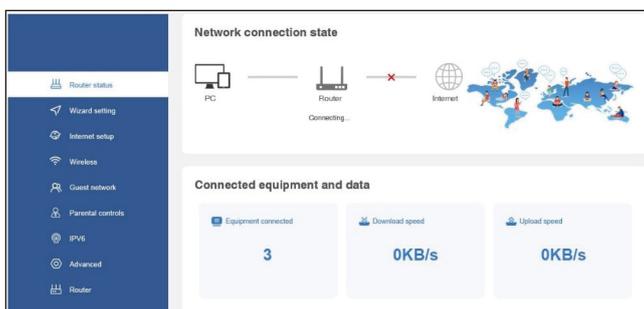

- 7 -

Further Information:

The above steps introduce the simple installations and configurations of the WDRT-1800AX. For further configurations of LAN, Wireless, Access Control, etc, please refer to the user manual, which can be downloaded from the website.

<https://www.planet.com.tw/en/support/download.php?&method=keyword&keyword=WDRT-1800AX&view=3#list>



If you have further questions, please contact the local dealer or distributor where you purchased this product.

PLANET Technology Corp.

10F., No. 96, Minquan Rd., Xindian Dist., New Taipei City 231, Taiwan

2011-E50360-000

Energy Saving Note of the Device

This power required device does not support Standby mode operation. For energy savings, please remove the DC plug or slide the hardware-based Power Switch to the OFF position to disconnect the device from the power circuit. Without removing the DC plug from or switching off the device, the device will still consume power from the power source. In view of Saving the Energy and reducing the unnecessary power consumption, it is strongly suggested to power off or to remove the DC plug from the device if this device is not intended to be active.



- 8 -