

1. Package Contents

Check the following contents of your package:

FSD-604HP	User's Manual
	
Foot Pad	Power Cord
	

If any of these are missing or damaged, please contact your dealer immediately.

- 1 -

2. Product Features

- RJ45 Interfaces
 - 4 IEEE 802.3af/at 10/100TX Ethernet PoE injection ports (ports 1 to 4)
 - Two 10/100TX Ethernet uplink ports (ports 5 to 6)
- Power over Ethernet
 - Complies with IEEE 802.3af/at Power over Ethernet end-span PSE
 - Up to 4 IEEE 802.3af/2 IEEE 802.3at devices powered
 - Supports PoE power up to 30 watts for each PoE port
 - 60-watt PoE budget
 - Hardware-based DIP switch for "Standard" and "Extend" mode selection; the "Extend" mode features 30-watt PoE transmit distance of 250m at speed of 10Mbps and VLAN isolation
 - Auto detects powered device (PD)
 - Circuit protection prevents power interference between ports
 - Remote power feeding up to 100m in standard mode

- 2 -

■ Switching

- Hardware-based 10/100Mbps auto-negotiation and auto MDI/MDI-X
- Flow control for full duplex operation and back pressure for half duplex operation
- 1536bytes packet size
- Integrates address look-up engine, supporting 2K absolute MAC addresses
- Automatic address learning and address aging
- Solid DIP switch to isolate ports to prevent broadcast storm and defend DHCP spoofing

■ Hardware

- Desktop palm size
- LED indicators for PoE ready/activity and LINK/ACT
- Supports Contact Discharge of ±4KV DC and Air Discharge of ±6KV DC for Ethernet ESD protection
- Supports ±4KV Surge Immunity
- Internal AC power supply
- Fanless design

- 3 -

3. Switch Front Panel

Figure 3-1 shows the front panel of the FSD-604HP.


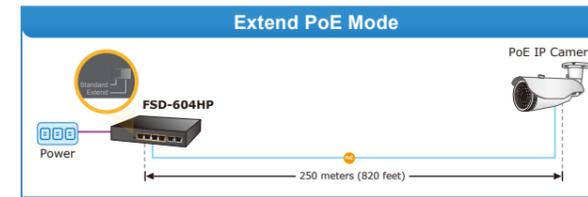


Figure 3-1: FSD-604HP Front Panel

The front panel of the FSD-604HP provides one DIP switch for "Standard" and "Extend" mode selections. The detailed descriptions are shown in the following table.

DIP Switch Mode	Function
Standard (default)	This mode makes the FSD-604HP operate as a general switch and all ports operate at 10/100Mbps auto-negotiation.
Extend	<ul style="list-style-type: none"> ■ This mode makes the FSD-604HP operate as a VLAN isolation switch and port 1 to port 4 will isolate respectively. Port 1 to port 4 can communicate with uplink ports 5 and 6. ■ This mode also makes the FSD-604HP operate at auto-negotiation 10Mbps speed duplex mode only, but the delivery distance of PoE power and network data can reach 250m.

- 4 -

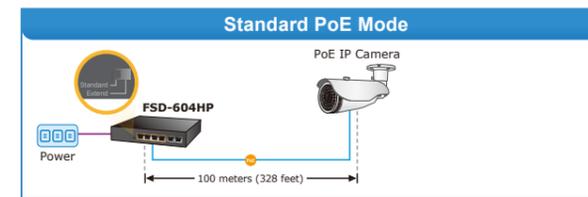

100BASE-TX UTP with PoE
10BASE-T UTP with PoE



After changing the mode, you need to manually restart the FSD-604HP to make the corresponding configuration take effect.

- 5 -

4. LED Indicators

System

LED	Color	Function
PWR	Amber	Lights to indicate the Switch has power.

Per 10/100Mbps Port

LED	Color	Function
PoE	Amber	Lights to indicate the port is providing DC in-line power to remote PoE PD.
LNK/ACT	Green	Lights to indicate the link through that port is successfully established at 10/100Mbps. Blinks to indicate that the Switch is actively sending or receiving data over that port.


- 6 -

5. Switch Rear Panel

Figure 5-1 shows the rear panel of the FSD-604HP.



Figure 5-1: FSD-604HP Rear Panel

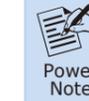

Power Note

1. The device is a power-required device, meaning it will not work till it is powered. If your networks should be active all the time, please consider using UPS (Uninterrupted Power Supply) for your device. It will prevent you from network data loss or network downtime.
2. In some areas, installing a surge suppression device may also help to protect your FSD-604HP from being damaged by unregulated surge or current to the FSD-604HP.

- 7 -

6. Installing the Switch

This part describes how to install your FSD-604HP and make connections to it. Please read the following sections and follow the procedures as presented.



Note

This FSD-604HP does not need software configuration.

Desktop Installation

To install the FSD-604HP on desktop, simply follow the following steps:

- Step 1:** Place the FSD-604HP on desktop near an electrical outlet.
- Step 2:** Keep enough ventilation space between the FSD-604HP and the surrounding objects.



Note

When choosing a location, please keep in mind the environmental restrictions discussed in Chapter 7 -- Product Specifications.


- 8 -

Step 3: Connect your FSD-604HP to network devices.

- Connect one end of a standard network cable to **Uplink Ports 5 and 6** of the FSD-604HP.
- Connect the other end of the cable to the network devices such as routers, Ethernet switches or NVRs (network video recorders).

Step 4: Connect your FSD-604HP to PoE PDs.


- Connect one end of a standard network cable to one of the four 10/100Mbps RJ45 PoE+ ports of the FSD-604HP.
- Connect the other end of the cable to the 802.3af/ at PD.

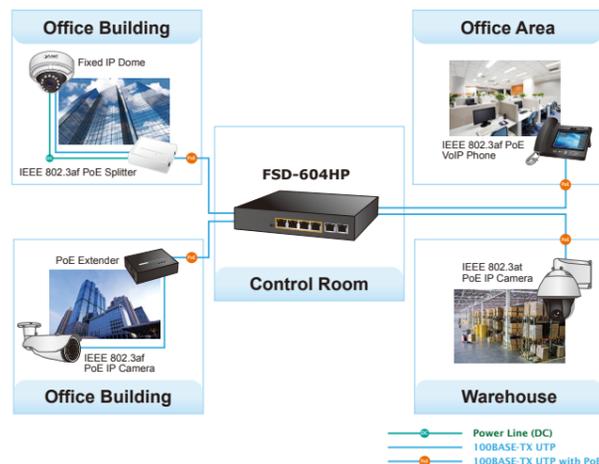

Wall-mount Installation

Step 1: Find a suitable wall location to mount the FSD-604HP.

Step 2: Refer to the picture below to tighten the two screws on the wall.

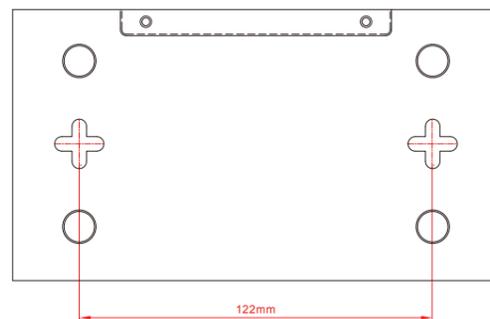

Step 3: Hang the FSD-604HP on the screws from the wall.

Step 4: Repeat step 5 of **Desktop Installation** for power supply to the FSD-604HP.

Note Before mounting the device to the wall, please check the location of the electrical outlet and the length of the Ethernet cable.

www.PLANET.com.tw

4-Port 10/100TX 802.3at PoE + 2-Port 10/100TX Desktop Switch

FSD-604HP

PLANET Technology Corp.
10F., No. 96, Minquan Rd., Xindian Dist., New Taipei City 231, Taiwan

Warning:
This device is compliant with Class A of CISPR 32.
In a residential environment this device may cause radio interference.
2351-AK3250-003



Note

Length of cable

- If the **"DIP Switch Mode"** is set to **"Standard"**, the distance (UTP/STP cable length) between the FSD-604HP and PC/PD should not exceed 100 meters.
- If the **"DIP Switch Mode"** is set to **"Extend"**, the distance between the FSD-604HP and PC/PD should not exceed 250 meters.

Note

Make sure the wiring is correct

Category 3/4/5 cable can be used in 10 Mbps operation. To reliably operate your network at 100Mbps, you must use an unshielded twisted-pair (UTP) Category 5/5e cable, or better data grade cabling. While a Category 3 or 4 cable may initially seem to work, it will soon cause data loss.

Step 5: Supply power to the FSD-604HP.

- Connect one end of the power cable to the Switch.
- Connect the plug of the power cable to a standard wall outlet.

When the Switch receives power, the power LED should remain solid Amber.

7. Product Specifications

Model	FSD-604HP 4-Port 10/100Mbps 802.3at PoE + 2-Port 10/100Mbps Desktop Switch
Hardware Specifications	
Uplink Port	2-Port RJ45 for 10/100BASE-TX, auto MDI/MDIX
PoE Inject Port	4-Port with 802.3af/at PoE injector function (Port 1 to port 4)
LED Display	System: Power (Amber) Per PoE port: PoE (Amber, port 1 to port 4) LNK/ACT (Green, port 1 to port 6)
DIP Switch	Distance in Standard mode is 100M Distance in Extend mode is 250M Based on the cable category
Switch Architecture	Store and Forward switch architecture
MAC Address Table	2K MAC address table with auto learning function
ESD Protection	6KV
Switch Fabric	1.2Gbps
Switch Throughput	0.89Mpps @64bytes
Maximum Packet Size	1536bytes
Flow Control	Back pressure for half duplex. IEEE 802.3x pause frame for full duplex
Power Requirements	AC 100~240V, 2A max.
Power Consumption	Max. 63 watts, 214 BTU
Dimensions (W x D x H)	168 x 93 x 32mm
Weight	499g

Power over Ethernet	
PoE Standard	IEEE 802.3af Power over Ethernet/PSE IEEE 802.3at Power over Ethernet Plus/PSE
PoE Power Supply Type	End-span
Power Pin Assignment	1/2 (+), 3/6 (-)
PoE Power Output	Per Port 54V DC, 300mA. max. 15.4 watts (IEEE 802.3af) Per Port 54V DC, 600mA. max. 30 watts (IEEE 802.3at)
PoE Power Budget	60 watts
Number of PDs (7 watts)	4
Number of PDs (15.4 watts)	4
Number of PDs (30 watts)	2
Standard Conformance	
EMI Safety	CE, FCC
Standard Compliance	IEEE 802.3 Ethernet IEEE 802.3u Fast Ethernet IEEE 802.3x Flow Control IEEE 802.3af Power over Ethernet IEEE 802.3at Power over Ethernet Plus
Environment	
Operating Environment	0 ~ 50 degrees C
Storage Environment	-10 ~ 70 degrees C
Operating Humidity	5 ~ 95%, relative humidity, non-condensing
Storage Humidity	5 ~ 95%, relative humidity, non-condensing

8. Customer Support

Thank you for purchasing PLANET products. You can browse our online FAQ resource on PLANET Website first to check if it could solve your issue. If you need more support information, please contact PLANET support team.

PLANET online FAQs:
<https://planet.com.tw/en/support/faq>

Support team mail address:
support@planet.com.tw

Copyright © PLANET Technology Corp. 2022.
Contents are subject to revision without prior notice.
PLANET is a registered trademark of PLANET Technology Corp.
All other trademarks belong to their respective owners.